




Blow off valve DD instruction manual

Parts list

Blow off valve	x 1	Bolts	x 2
Hose	x 1	BOV SUS filter	x 1
Gasket	x 1	Plastic Tee	x 1
Flange ring	x 1	Hose clamps	x 2

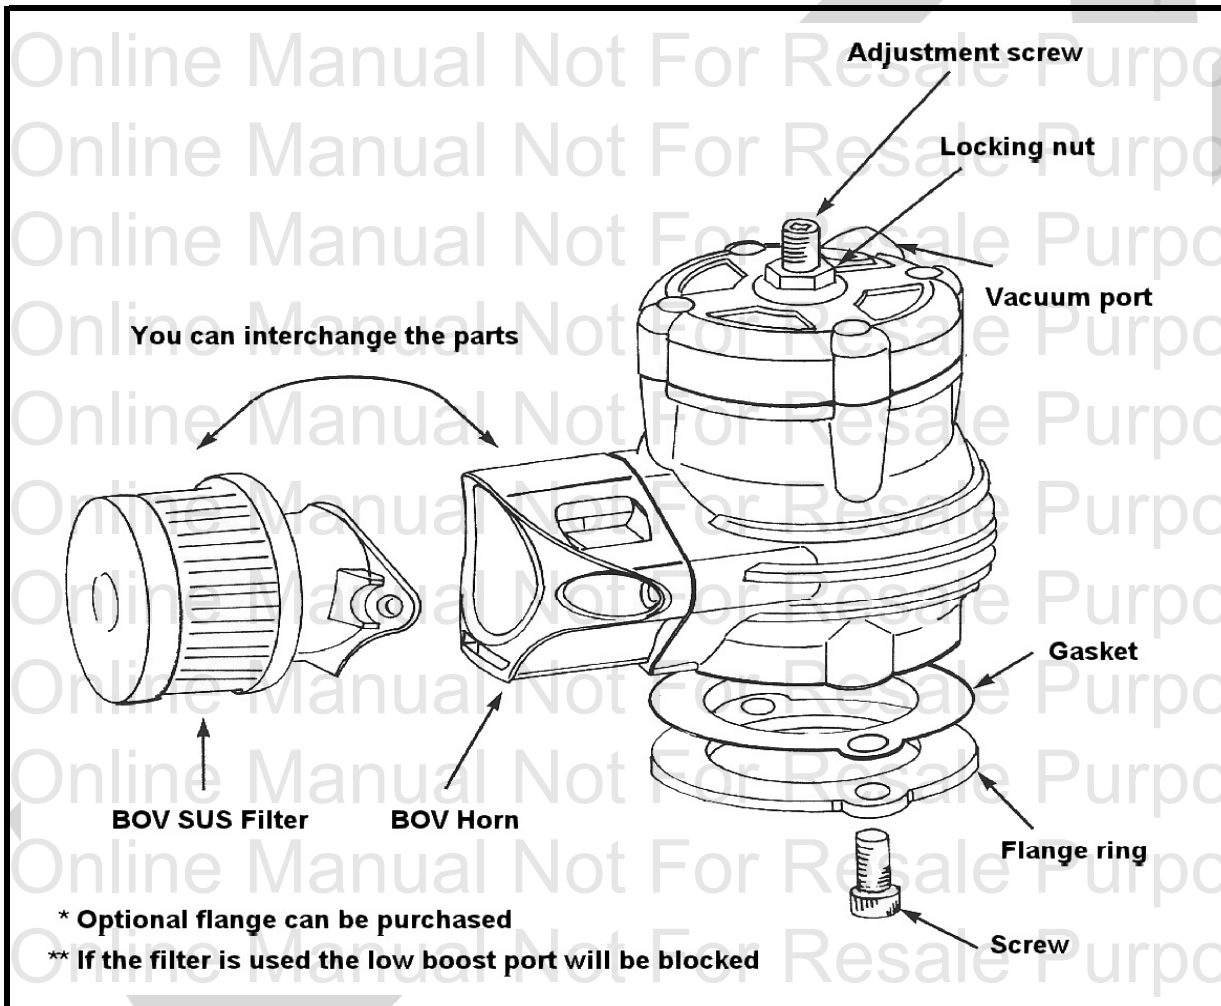




Blow off valve DD instruction manual

*The vacuum port must be located behind the throttle body. Make sure that the vacuum port receives both boost and vacuum pressure.

*Since different engines have different vacuum and boost pressures, set the Blitz blow off valve so that there is no air leak under idle. In order to adjust the BOV loosen the 10 mm nut on the top and adjust the adjustment screw clockwise to tighten and counterclockwise to loosen. After adjusting remember to tighten the adjustment screw.

Blow off valve placement:

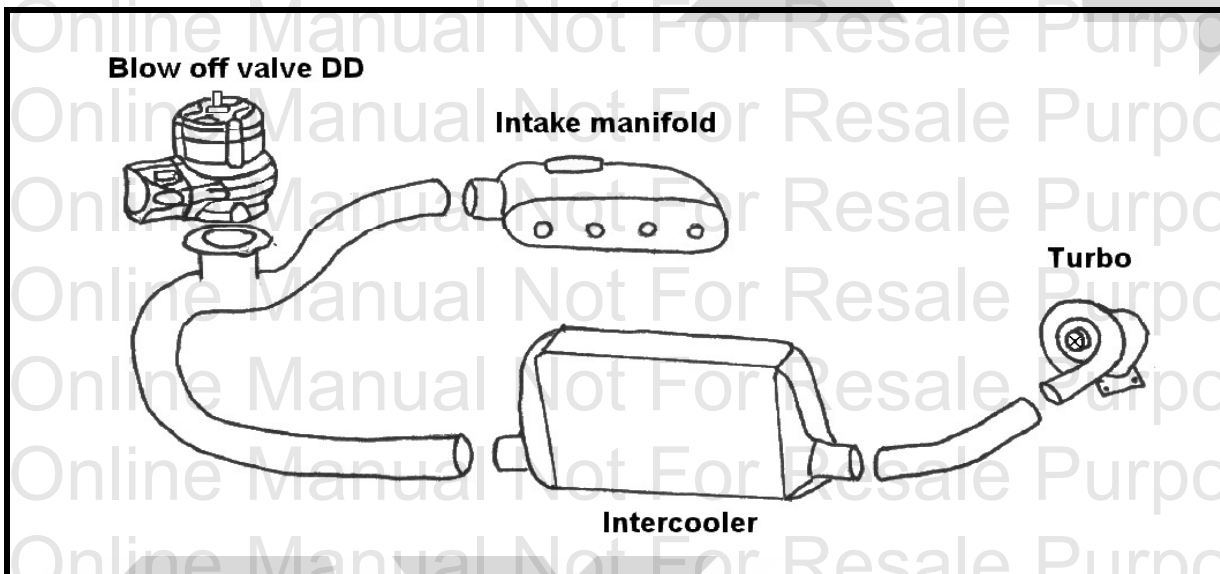

*The Blow off valve should be placed anywhere between the turbo charge pipe and the throttle body. Caution: some vehicles will have problems if the BOV is placed too close to the throttle body or the turbo charger.